

# OPERATING INSTRUCTIONS

## ELTRIP-R20 ELTRIP-R20*f*



06/2012



Pilvitie 6  
90620 Oulu  
FINLAND

p. +358-8-512 165  
[www.trippi.fi](http://www.trippi.fi)  
toni.rasanen@trippi.fi

## Table of contents

1. TECHNICAL INFORMATION.....	4
2. INTRODUCTION.....	5
3. Installation of Eltrip-R20.....	6
3.1. Installation location.....	6
3.2. Connection of cables.....	6
3.2.1. Using LEDs as change indicators.....	7
3.3. Precautions!.....	7
4. Setting up Eltrip-R20.....	8
4.1. Setting distance calculator.....	8
4.2. Settings.....	9
4.2.1. Brightness.....	9
4.2.2. Distance unit.....	9
4.2.3. Speed unit.....	9
4.2.4. RPM-Factor.....	10
4.2.5. Language.....	10
4.3. Setting the time.....	10
4.4. Calibrating stopwatch.....	10
4.5. Setting target average speed.....	10
4.6. Calibrating fuel display (R20f-model only).....	10
5. Using Eltrip-R20.....	12
5.1. Displays and counters.....	12
5.1.1. Using displays.....	12
5.1.2. Selecting display and counters.....	12
5.1.3. Clearing a counter.....	13
5.1.4. Setting the displays.....	13
5.2. Trip counters 1, 2 and 3.....	14
5.3. Clock.....	14
5.4. Stopwatch.....	14
5.4.1. Automatic starting of stopwatch.....	14
5.4.2. Stopwatch downcounting.....	14
5.5. Speed.....	15
5.6. Average speed.....	15
5.7. Time display of target average speed.....	15
5.8. Arrival time.....	15
5.9. RPM counter.....	15
5.10. Fuel (only R20F-model).....	16
5.11. Custom logo and turning display off.....	16
6. Usage of meter during race.....	17
6.1. Preparation.....	17
6.2. Preparations before start.....	17
6.3. After the race.....	17

7.Problems?.....18  
8.Declaration of Conformity.....19  
9.Eltrip-R20 quick instructions.....20

# 1. TECHNICAL INFORMATION

KEYBOARD: 16 click-type buttons

COUNTERS:

- 3 trips; one with 1 metre and 2 with 10 metre resolution
- Clock; hours, minutes, seconds
- Speed with 0,1 km/h resolution
- Average speed with 0,1 km/h resolution
- Stopwatch with 1/100th second resolution
- Automatic start of stopwatch
- RPM counter
- Gear change indication based on RPM
- Fuel amount display (only R20f-model)

REGISTERS:

- Setting of imp/km
- Clock time
- Gear change thresholds (down/up)
- Fuel amount calibration

DISPLAY: Graphical display, 10mm or 5mm number height based on mode, can be switched off

DIMENSIONS: 145x47x25mm (W x H x D)

WEIGHT: approx 150 g

OPERATING VOLTAGE: 10-30v

POWER CONSUMPTION:

- Display on approx. 100mA, Display off approx. 50mA

OPERATING TEMPERATURE: -30° - +60° C

FURE: max 400 mA

SENSOR: multiple options

## 2. INTRODUCTION

We congratulate you for choosing a reliable ELTRIP-meter.

This booklet will instruct you on how to install and use your new Eltrip-meter. Please read this booklet carefully so you are familiar with installation, calibration and the use of the meter. This allows you to gain maximum benefits from the meter.

If you have any technical problems with the meter, see instructions chapter 7. If the problem persists, please contact our local representative for further instructions. Although we trust that you are expert on many suspects, please do not attempt to open or repair the meter by yourself, as the repair of electronics inside the meter requires special tools and knowledge. Attempt to repair the meter by yourself may seriously damage the meter and void the warranty. Installation and use against these instructions will also void the warranty.



When your rally meter is at end of its road, please return it to us our our local representative for recycling. Returning the meter is free for you. For further instructions, please contact us.

### 3. INSTALLATION OF ELTRIP-R20

#### 3.1. *INSTALLATION LOCATION*

Install the meter so that you can easily read and reach it. The meter should not affect the use of vehicle's other controls or visibility outside the vehicle. Avoid place where meter is in direct sunlight or in front of heating vents.

#### 3.2. *CONNECTION OF CABLES*

Sensor is installed according to separate instructions.

We recommend that the meter is installed to continuous power.

#### **DANGER! RISK OF FIRE!**

**If the main power switch of vehicle is connected to minus (-) lead of battery and you wish to connect meter to continuous power, please contact the manufacturer for further instructions.**

**Inside the meter the minus lead (-) and meter housing are connected together. This connection may bypass main power switch and cause safety hazard.**

Black wire: Connect to vehicle chassis (ground).

Red: Power supply +10 .. +30v, fused with fast max. 400mA fuse. Can be taken from vehicle fuse box or other suitable location that does not interfere meter or other circuits of vehicle.

White: Positive wire of sensor is connected to white wire, negative wire of sensor to vehicle ground (black wire). If vehicle's own distance pulse is used, only the white wire is connected. Some vehicles may require an adapter for connection. If ABS sensor is used, an external divider is required.

Purple: Negative/Positive counting (reverse). If you wish to connect meter so that distance counts backwards when vehicle is in reverse gear, connect this to reverse light. If you do not need this functionality, connect this to vehicle ground.


Yellow: Display clear with external switch. If you wish to use external switch to reset meter counter (for example foot switch), connect the switch between this wire and vehicle ground. If not needed, leave unconnected.

Green: RPM measurement. Connect green wire to RPM sensor. If RPM sensor is not used, leave unconnected.

Orange: Gear up-change indicator light. Connect a lamp between this wire and vehicle ground if gear up-change indicator is used. NOTE: If you wish to use LED, a resistor is required.

Brown: Gear down-change indicator light. Connect a lamp between this wire and vehicle ground if gear down-change indicator is used. NOTE: If you wish to use LED, a resistor is required.

Blue: (R20f) Fuel amount measurement. Use vehicle's original fuel sensor. Depending on vehicle, extra electronics may be needed.

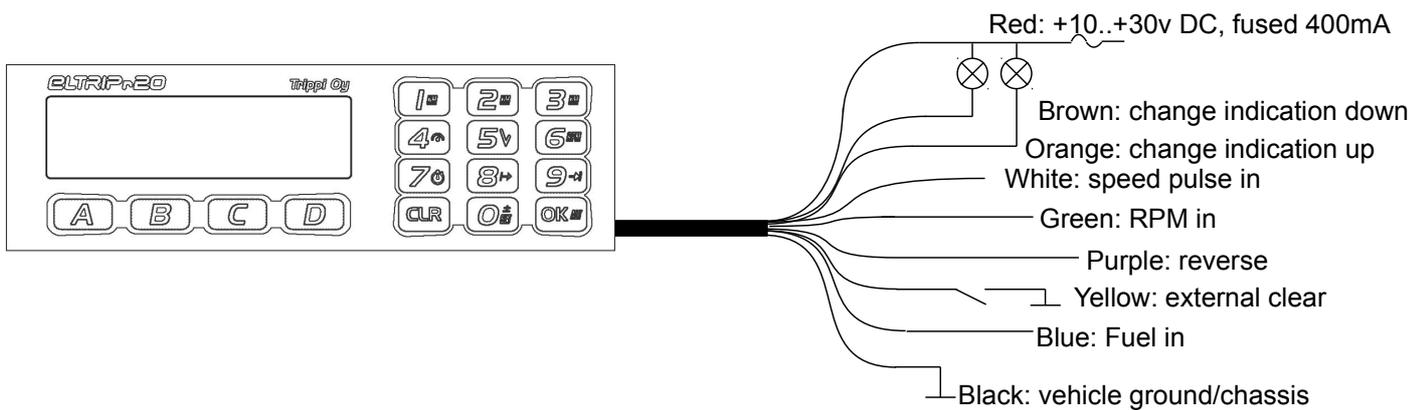

### 3.2.1. USING LEDS AS CHANGE INDICATORS

If you wish to use LED as change indicator light, connect anode of LED to +12v and cathode through a (approx) 600 ohm resistor to meter's signal wire. Without the resistor the LED will be damaged or destroyed almost immediately.

### 3.3. PRECAUTIONS!

When welding the vehicle, disconnect the meter from battery. Although the meter is protected from electrical interference normally present within a vehicle, the high voltages present during the welding process may damage sensitive electrical equipment.

Replace blown fuse only with similar fuse (max 400mA, fast) .

## 4. SETTING UP ELTRIP-R20

### 4.1. SETTING DISTANCE CALCULATION

After installation the correct distance calibration factor must be set to meter. This is the number of impulses from the sensor that indicates one kilometre (or mile) of travel. Calibration constant depends on vehicle, its tires and location of sensor.

Accuracy of the meter fully depends on the calibration factor, so be careful when adjusting it. If the conditions change later (if, for example, vehicle tires are changed), verify the measurement accuracy and if needed, adjust calibration constant. Make note of calibration constant so it may be verified later.

Before calibration verify that the distance unit that the meter is set to use matches the distance unit you wish to use. Change it if needed (see chapter 4.2.2 below).

If you know the calibration constant (number of pulses per kilometre or mile), set it to meter as follows:

1. Press SET and 1 keys at same time (SET first). Meter enters calibration mode.
2. Use number keys to enter calibration factor (for example 3653).
3. CLR key can be used to correct number
4. Accept number by pressing OK or *Accept*

If you do not know the exact calibration factor, you can also set it up by driving a kilometre-long test track by selecting *Measure* when in calibration setup display. Measurement is done as follows:

1. Drive vehicle to known one-kilometre track
2. Select *Measure*. If at start of track there are pulses measured, you may clear the counter by pressing CLR.
3. Drive through the measurement track.
4. Accept measurement by selecting *Use*.
5. If measurement track was shorter or longer than 1 kilometre (or 1 mile), alter reading as shown in following table:

<u>Track length</u>	<u>Factor</u>
100 m (0,1 mi)	10 x measured number
200 m (0,2 mi)	5 x measured number
500 m (0,5 mi)	2 x measured number
1000 m (1,0 mi)	1 x measured number
2000 m (2,0 mi)	0,5 x measured number

For example: On a 200 metre long track a number of 215 is measured. A correction factor is applied:  $215 \times 5 = 1075$ , which is then set as meter's calibration constant.

When calibration is done, verify accuracy of measurement by driving through the test track by using normal distance counter 1. If the measured distance does not match the track length, correct the calibration constant.

## 4.2. SETTINGS

Used measurement units, language and RPM correction factor are done in meter settings. Settings mode is entered from normal operating mode as follows:

1. Press SET+1 together to enter calibration mode
2. Select *Settings* (key B)

Setting items are selected with *Previous* / *Next* and then changed with *Select*, or by pressing directly the number key of the settings (for example 2 for Distance unit). When finished, press CLR to exit settings.



*Settings display*

### 4.2.1. BRIGHTNESS

Display brightness can be adjusted in 4 steps from dim (suitable for night use) to bright that can be seen even in bright daylight.

### 4.2.2. DISTANCE UNIT

The unit used to display measured distances can be selected from three possibilities: kilometres (km), miles (mi) or metres (m). Note that when changing between metric and imperial units meter must be recalibrated, as the meter is always calibrated to used base unit – either kilometre or mile. When using metre display meter is also calibrated to one kilometre distance.

### 4.2.3. SPEED UNIT

Speed unit can be selected from three possibilities: kilometres per hour (km/h), miles per hour (mi/h) or metres per second (m/s). When changing speed unit meter does not need recalibration unless distance unit is also changed, and using mixed units is also possible (for example distance in kilometres per hour and speed in miles per hour).

#### 4.2.4. RPM-FACTOR

In order to RPM display to show correctly, correct factor must be selected. The factor depends on method of measuring of the RPM and the engine. For example, if given measurement point gives 1 impulse per two revolutions of engine, correct factor is 2.

#### 4.2.5. LANGUAGE

The language is selectable between finnish and english.

### 4.3. **SETTING THE TIME**

Meter has internal clock which will keep correct time for approximately a week after meter has been disconnected from power, so for short vehicle maintenance procedures clock does not need to be re-set. Note that clock does not automatically switch between normal and daylight savings time; this must be done manually. Clock always operates in 24-hour format.

Time can be set as follows:

1. Press SET+5
2. Enter time with number keys in format hhmmss. For example 8:09:23 is entered as 080923.
3. Accept by pressing *Accept*.

### 4.4. **CALIBRATING STOPWATCH**

Stopwatch must be calibrated to maximize its accuracy. The accuracy of stopwatch depends on environmental factors (temperature), so calibration should be done when meter is in environment where it will be used. Calibration is fully automatic and done as follows:

1. Press SET+3+1 (press keys in this order)
2. Calibration takes approx. 30 seconds and meter then returns to normal mode.

### 4.5. **SETTING TARGET AVERAGE SPEED**

In order for time display of target average speed to work, the target speed must be set to meter. Meter remembers the set value until next time it is changed.

1. Press SET+4
2. Enter target speed
3. Accept by selecting *Accept*

### 4.6. **CALIBRATING FUEL DISPLAY (R20F-MODEL ONLY)**

The fuel calibration is done when vehicle is on level surface and starting from completely empty tank.

1. Press SET+2. On calibration display's left side is shown reading "f=123". This

reading must change when amount of fuel changes (note; the reading may also go down when amount of fuel is increased). If the reading does not change, verify the fuel sensor connection.

2. Completely drain the fuel tank, then select OK.
3. Add desired amount of fuel (for example 3 litres) and enter new amount in tank (3.0 litres), then select OK.
4. Add more fuel (for example 2 litres), then enter new amount in tank (now 5.0 litres), and select OK.
5. Repeat adding fuel and entering new amount for maximum of 8 times. Amount of fuel added does not need to be same, but it is recommended.
6. After last adding select "Ready"; new amount does not need to be entered in this case.
7. Calibration is done. Meter verifies result, and if there appears to be something wrong (for example measured amount not changed in between measurements), meter reports of the problem. The calibration is then stored anyway and measurement can be used.

## 5. USING ELTRIP-R20

### 5.1. DISPLAYS AND COUNTERS


#### 5.1.1. USING DISPLAYS

Meter can be configured with four different *displays* for different use cases (for example so that during race the measurements are shown and after race results). Display is selected with keys A-D, below the display.


Each display can include from one to four different *counter displays*, where desired information, for example speed or stopwatch are shown. Number of counters on each display, as well as included counters can be selected freely.

#### 5.1.2. SELECTING DISPLAY AND COUNTERS


A display is selected by pressing key A-D. When pressed first time the display is shown and all counters within that display are selected (bright border around entire display). After pressing same display selection key again first counter on screen selected (bright border around it), after next press next counter and so on, until after last counter all counters on display are selected again.

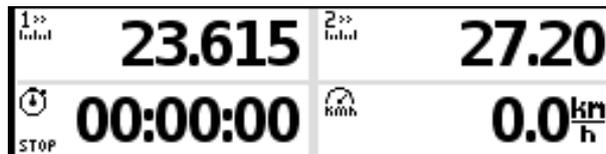

*Display selected with A-key; all counters selected*

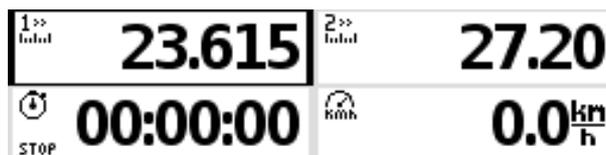

*After pressing A again first counter is selected*

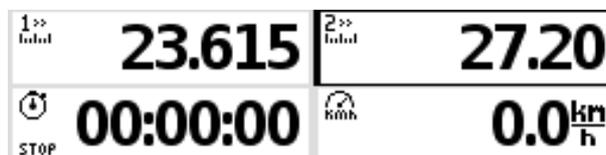

*After pressing A again next counter is selected*

A counter can be selected by pressing shortcuts in numeric keys, if it is shown on display. If, for example stopwatch is shown on display, it can be selected directly by pressing key 7.

### 5.1.3. CLEARING A COUNTER


A counter is cleared (zeroed) by selecting it and pressing CLR-key for approx. one second. This clears either single selected counter, or if entire display is selected, all clearable counters on it. Counters are cleared so that the moment the CLR-key was pressed down is the zero moment, even if vehicle had moved during the clearing period.

Clearable counters are distance counter and stopwatch. Average speed and finishing time are cleared with the stopwatch.

If external clear switch is used, it clears the counters immediately after being pressed.


### 5.1.4. SETTING THE DISPLAYS

The amount of counters that are shown on display can be adjusted by pressing SET and display's shortcut key A-D together. Note that after pressing these, both must be released before they can be used again.

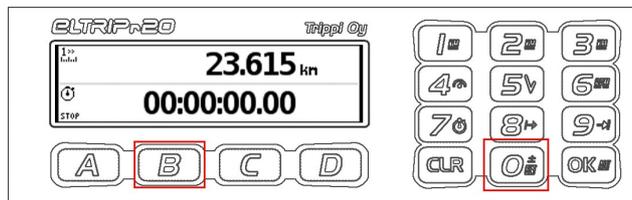


*Number of counters on display B is changed by pressing SET and B*

A counter within a display can be changed by selecting the counter and pressing a selection key of a counter for more than two seconds. For example pressing key 4 for one seconds selects a speed as counter.

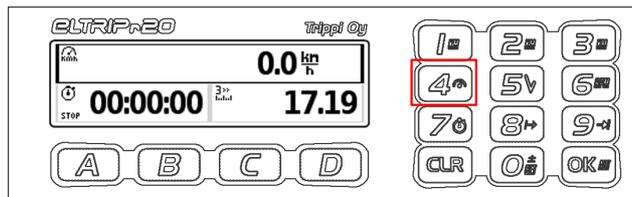

*Speed is selected to counter by pressing 4 for two seconds*

To select a sub-operation of a counter (for example average speed), first select speed to a counter, and then sub-operation by pressing ALT key for two seconds.

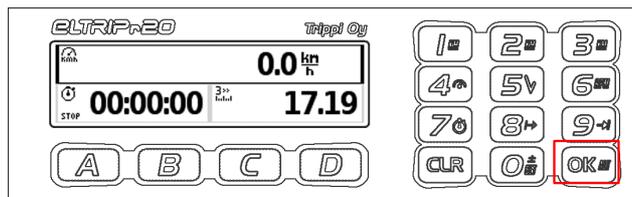

*Speed is changed to average speed by pressing ALT of two seconds*

## 5.2. TRIP COUNTERS 1, 2 AND 3

Distance (trip) counters are selected with number keys 1-3. Trip 1 has 1-metre (or 1/1000th of a mile) resolution and trips 2 and 3 have 10-metre resolution. All three can be independently cleared and they measure distance continuously. They are cleared by selecting counter and pressing CLR for approx one second.

If meter's reverse wire is connected, counters automatically count backwards when vehicle is in reverse. Counter can also be manually set to count backwards by pressing +/- key for approx a second. If enabled, downwards arrow is shown next to counter indication. This can be disabled by pressing +/- key again for one second. Note that if manual down-counting is enabled, meter will actually count up when vehicle is on reverse.


## 5.3. CLOCK

Clock is selected by pressing 5. Clock is always in 24-hour mode and has hours, minutes and seconds shown. Clock will keep time for approximately a week after meter has been disconnected from power.

## 5.4. STOPWATCH

Stopwatch is selected by pressing 7. Stopwatch counts time from the moment it is started at 1/100th second resolution. Note that if region of counter on display is not wide enough, hundredths are not shown. Stopwatch can be started with start (8) and stop (9) keys at any time, even when stopwatch is not currently selected.

When stopwatch is stopped, STOP-text is shown in the display. Clearing the stopwatch will also stop it.

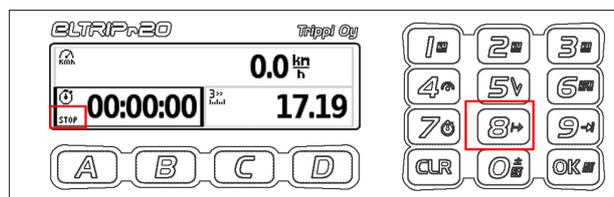

*Stopwatch while cleared and stopped. It is started with 8-key.*

### 5.4.1. AUTOMATIC STARTING OF STOPWATCH

Stopwatch can be set to automatically start at the moment vehicle moves. Automatic starting is enabled by pressing SET and 8 at same time. This mode is indicated by showing AUTO at the left part of the display.

### 5.4.2. STOPWATCH DOWNCOUNTING

Stopwatch can also be set up to count down from given time. This is done by pressing SET and 7 keys at same time and entering start time (for example 4 hours, 7 minutes and 50 seconds is entered as 40750). After time is entered, selecting *Accept* will start

the stopwatch immediately counting down, and selecting *Auto* will enable the stopwatch autostart. When stopwatch is cleared it will return to up-counting mode unless down-counting is selected again.



*Entering stopwatch start time*

### **5.5. SPEED**

Current speed is selected by pressing 4-key. Speed is shown with 0,1 km/h, m/s or mi/h resolution and updated once a second.

### **5.6. AVERAGE SPEED**

Average speed is selected by selecting first speed (key 4) and after that subcounter by holding ALT down for two seconds. Average speed is tied to stopwatch and is updated only when stopwatch is running. Average speed is cleared when stopwatch is cleared or countdown timer set.

### **5.7. TIME DISPLAY OF TARGET AVERAGE SPEED**

Target average speed indicates how many seconds slow/fast vehicles calculated average speed is to set target; for example value "-1:23" indicates that vehicle is one minute 23 seconds behind (slow) of given target.

Target speed display is set by first selecting average speed and then next subcounter by pressing ALT for two seconds. This counter is also fixed to stopwatch operation and only updated when stopwatch is running. Time is cleared when stopwatch is cleared or countdown timer set.

Target speed used for calculation is changed by pressing SET and 4 at same time.

### **5.8. ARRIVAL TIME**

Arrival time is selected by selecting first clock (key 5) and after that subcounter with ALT-key. Arrival time or goal arrival time is the time when stopwatch was stopped for the last time. Each stopping of stopwatch sets new arrival time.

### **5.9. RPM COUNTER**

Engine RPM counter is selected with key 6. The counter and its associated change indicators are active even if the counter itself is currently not shown on display. The lower and upper limits are set by pressing SET and 6 at same time. The down-shift indicator is lit when RPM is below lower limit, and up-shift indicator is lit when RPM is above higher limit.

### **5.10. FUEL (ONLY R20F-MODEL)**


Fuel display is selected by first activating trip counter 2 (key 2) and then subcounter with ALT key. Fuel measurement is done continuously. Note that if vehicle is not level or fuel is moving in the tank, the reading may not be exact due to the shape of the fuel tank.

### **5.11. CUSTOM LOGO AND TURNING DISPLAY OFF**

Meter will turn display off automatically after five minutes is vehicle is stopped and stopwatch is not running. In this case meter activates display automatically when vehicle starts moving again or any key is pressed.

If meter has no custom logo or picture loaded, meter display can be turned off by pressing SET and CLR at same time. If a logo is loaded, SET and CLR at same time will first show the logo. Logo will remain on display until a key is pressed. When logo is shown, pressing CLR will turn the display off. Any other key will return to normal operating mode.

All counters continue to operate normally when meter is showing the logo or display is turned off. When meter display is turned manually off, meter will not activate automatically when vehicle moves but must be activated manually by pressing any key.

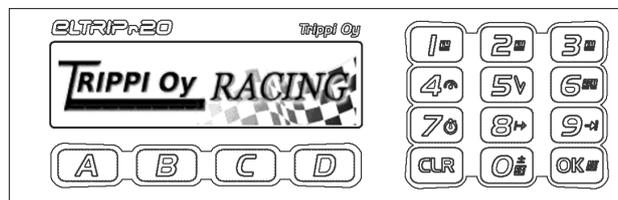

Custom logo must be provided when ordering the meter, or meter must be delivered to manufacturer or representative for logo programming.

NOTE: Keeping display on all the time (either by running stopwatch, or keeping logo on) will shorten the lifespan of the display. Thus keeping logo showing all the time or stopwatch running is not recommended.

## **6. USAGE OF METER DURING RACE**

### ***6.1. PREPARATION***

Before the race select suitable counters to displays, for example speed, stopwatch and trip to display to be used during the race, and average speed, arrival time and trip to the display to be used after the race.

### ***6.2. PREPARATIONS BEFORE START***

#### 1. Clear all counters

- select desired counter (1-3) and press CLR for a second
- select stopwatch and press CLR for a second
- alternatively select entire display and press CLR to clear all visible counters

#### 2. Enable stopwatch autostart

- Press SET and 8 together; stopwatch display will show "AUTO"

### ***6.3. AFTER THE RACE***

When arriving to goal stop the stopwatch which will store the arrival time. Activate display prepared for after the race to review results.

## **7. PROBLEMS?**

If you encounter problems, here is a short list of common problems with their solutions. If this does not help, contact representative or manufacturer for further instructions.

Under no circumstances do not open meter enclosure, as electronics within may be damaged by improper handling and such damages are not covered by warranty. Warranty does not cover installations made against instructions.

### **Display blank**

Press a key to enable display. If this does not help, verify the fuse and power connections.

### **Meter does not measure distance**

Verify the sensor and its connections. Verify that connectors are properly set. If you are using magnetic sensor, verify the magnets. If problem persists, contact representative or manufacturer.

The voltage on signal wire should alter between 2-4v or even more when magnets pass over the sensor (should be less than 1v when magnet is directly on sensor). Of voltage is constantly at 5v or more, the sensor wire may be cut or sensor broken. If voltage is below 1v all the time, cable or sensor may be shorted.

### **Meter measures backwards**

Verify that downcounting is not enabled. Purple wire may be not connected to ground or does not get proper contact.

If connected to reverse light, connection must be made to positive side of the lamp. Lamp may also be burned out, there may be problem with reverse switch or lamp may have bad grounding.

### **Meter measures distance but no time**

Contact manufacturer.

### **Meter measures distance or speed wrong**

Re-calibrate the meter.

### **Other problems**

If you have other problems with installation or usage, contact the representative or manufacturer for assistance.

## 8. DECLARATION OF CONFORMITY

Trippi Oy declares under our sole responsibility that the following products:



Type: Rally Meter  
Models: Eltrip-R20, Eltrip-R20f

Manufacturer:

Trippi Oy  
Pilvitie 6  
90620 Oulu  
Finland

Meet the requirements set by following directives and their requirements:

2004/104/EU (EMC), appended 2006/28/EU and 2009/19/EU  
2002/95/EU (RoHS), appended 2011/65/EU

Following standards have been used:


ISO 7637-2  
IEC 61000-4-2  
IEC 61000-4-3

Signed

A handwritten signature in black ink, appearing to read 'Toni Räsänen', is written over a horizontal line.

Toni Räsänen, CEO  
7.3.2012

## 9. ELTRIP-R20 QUICK INSTRUCTIONS

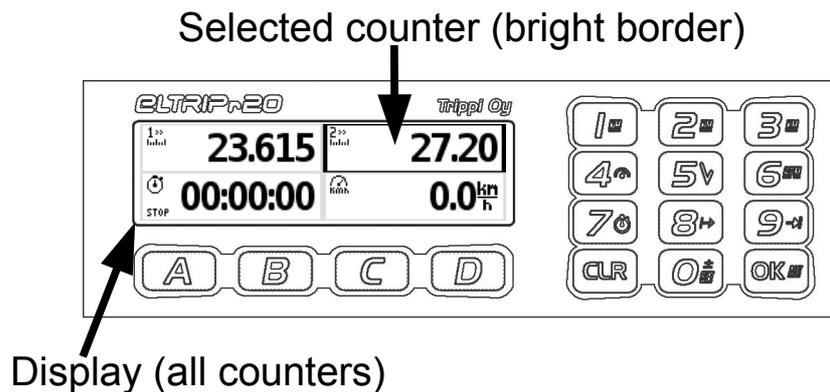

In normal operating mode screen shows selected display and counters on it.

Keys A-D below screen are used to select specific display, or when pressed again next counter on current display until after last counter all counters on display are selected again.

Pressing numeric keys 1-7 for two seconds changes type of currently selected single counter. Pressing OK/ALT for two seconds changes to current counter's next available sub-counter. The counters are as follows:

1. Trip 1, 1 metre resolution
2. Trip 2, 10 metre resolution; with ALT fuel (only R20f)
3. Trip 3, 10 metre resolution
4. Speed, with ALT average speed and time display of target average speed
5. Clock, with ALT arrival time
6. RPM counter
7. Stopwatch

Keys 8 and 9 are used to start and stop the stopwatch. Pressing 0 (+/-) for a second will change counting direction of trips.

Long CLR will reset currently selected counter. Clearable are trips and stopwatch. If entire display is selected, all clearable counters on display are cleared.